


Deluxe Multi-function Massage Chair

RT9000

USER MANUAL

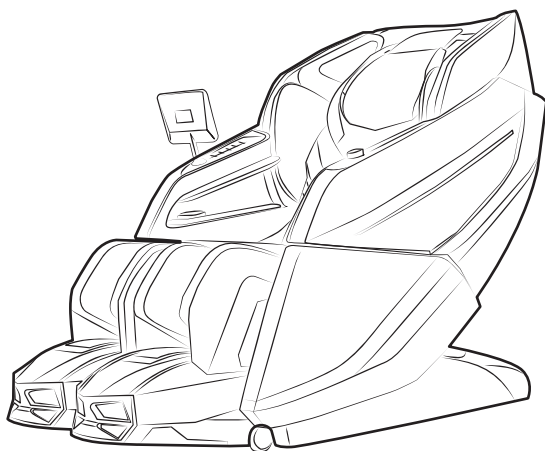

SAFETY PRECAUTIONS

Safety Precautions

- Before using, please read the SAFETY PRECAUTIONS carefully to ensure correct operation of this appliance.
- Precautions and warnings listed below will help to ensure proper operation of this appliance.
- The classes of accidents caused by incorrect use are classified into WARNING and CAUTION. Read all WARNINGS and CAUTIONS below and follow all instructions within this manual.

	WARNING	Improper operation may cause injury to users.
	CAUTION	Improper operation may cause injury to users or damage to product.
	Prohibited	 NO Disassemble

Not suitable for below persons

We recommend that those with any of the following conditions should consult your physician before using.

	◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, unless supervised or instructed. ◆ Children must be supervised and should not play with the appliance. ◆ Use caution with the heating function, especially for persons insensitive to heat.
	◆ Those with pacemaker or electronic devices implanted in the body. ◆ Those undergoing treatment, especially those who are not feeling well. ◆ Those with malignant tumors, acute disease, heart disease or severe hypertension. ◆ Need to be supervised. ◆ Women who are pregnant or menstruating. ◆ Those with osteoporosis, distorted joints, dysfunction or recent fracture. ◆ Those with serious or injured skin conditions. ◆ Those with high fever. ◆ The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance. (Need to be supervised) ◆ This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. ◆ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Controller Precautions

	◆ Do not operate the controller with wet hands or pull the controller wire by force. ◆ Do not spill water or other liquid into the controller to avoid fault. ◆ Do not lay heavy items on the controller.
---	---

Cautions Regarding the Power Connectors and Power Cord

	◆ The appliance is only to be used with the power supply unit provided with the appliance. ◆ It must only be supplied at safety extra low voltage corresponding to the marking on the appliance. ◆ Do not use a wet hand to unplug the AC cord to avoid electric shock. ◆ Do not pull on the power cord, reach to the front end to unplug it. ◆ Do not squeeze the power cord by heavy objects. ◆ Do not damage, over bend, pull hard or twist the power cord. ◆ If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
---	--

SAFETY PRECAUTIONS

Best Circumstances

 CAUTION	◆ Do not use this appliance where temperature is over 40 C . ◆ Do not use this appliance in moist or dusty environment. ◆ Unplug from outlet during thunder or lightening storms. ◆ Do not use outdoors. ◆ Please place the product on the flat level floor. ◆ Do not store near heat or open flame ◆ This product is intended for use at altitudes up to 2,000 meters..
---	--

Best Practices for Safe Use

 CAUTION	◆ Only for users weighs below 120kg. ◆ Do not use other therapeutic device together with this product. ◆ Use this product only for its intended use as described in this manual. ◆ Appliance should only be used by one person,do not use by two or more persons at the same time to avoid damage to the products. ◆ Do not use the product right after meal, it may cause discomfort. ◆ Remove the accessories from the arms and empty the pockets while use the massage services. ◆ Check the upholstery under the cushions and other spots, if any damages are present, do not use it and refer to a qualified service professional for servicing. ◆ If you feel any abnormal discomfort during the operation of this product, turn off the power immediately and do not use the product. ◆ Use the appliance for 20 minutes each time is highly recommended. ◆ Make sure there is no obstacles behind the chair and there is enough clearance before adjusting the backrest or footrest angle ◆ Make sure no other excessive load pressed on the backrest or footrest,keep children,pets or any other barrier away from the unit reclining backrest/extending footrest to prevent any accidental injury. ◆ Please be seated properly while using the appliance to avoid injury to the user or damage to the appliance. ◆ Do not drag or push the chair or roll on its casters on wood floor or carpet to avoid damage. ◆ This appliance includes a grounding connection for functional purposes only (functional earthing appliance).
 PROHIBITED	◆ Never operate this product if it has damaged /exposed parts or power leakage. ◆ Do not stand on or stack heavy objects on the footrest. ◆ Children should be supervised to ensure that they do not play with the massage chair. ◆ Do not fall into sleep while the product is operating. ◆ Avoid using the product under the influence of alcohol. ◆ Do not put hands or foreign objects in the openings of the appliance to avoid injury to the user or damage to the appliance. ◆ If there is any smoke or unusual smell during operation,stop using immediately.
 NO DISASSEMBLE	◆ Do not disassemble this product to avoid failure. ◆ Do not attempt to repair or dismantle the appliance without permission. ◆ Please contact authorized dealer or service agent.
 UNPLUG POWER CORD	◆ Pull out the power cord from the power strips before maintenance. ◆ Never plug in or pull out power cord with wet hand to avoid shock or injury. ◆ Pull out the power cord from the power strips after use. ◆ Unplug from outlet when the power supply is cut.

Thank you for purchasing this product.

Please read this user manual carefully before using to ensure proper installation and operation.

Please keep this USER MANUAL properly for future reference.

CONTENTS

NAME AND FUNCTION OF EACH COMPONENT

External Structure	3
Internal Structure	3
Controller	4
Armrest Buttons	5
Armrest Buttons Instructions	6
Functional Features	10

PRELIMINARY CHECKS

Installation Method	11
Moving the Massage Chair	16
Connecting to Power	16
Position & Placement for Installation	17
Floor Protection	18
Surrounding Environment	18
Grounding	18
Commissioning	19
Before Sitting in the Chair	19
After Use	20


CARE AND MAINTENANCE

TROUBLESHOOTING


TECHNICAL SPECIFICATIONS

01 NAME AND FUNCTION OF EACH COMPONENT

External Structure

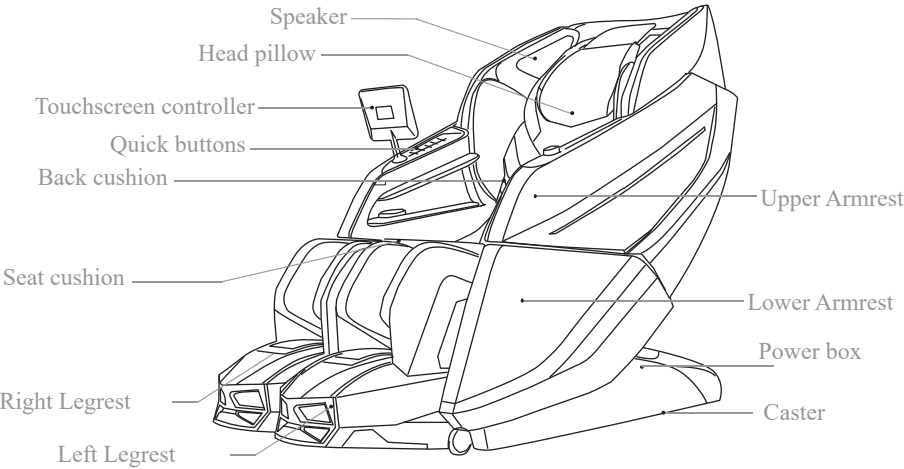

Internal Structure

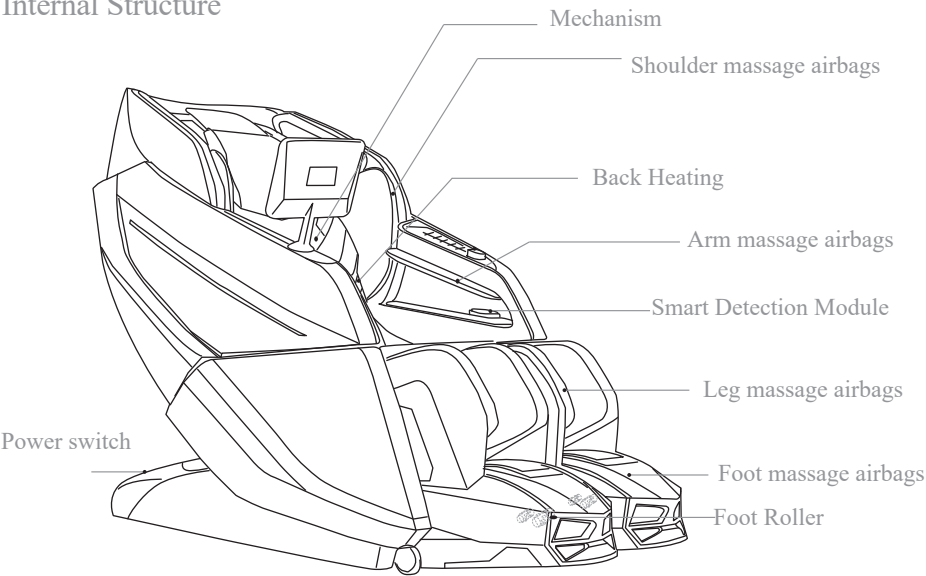


01 NAME AND FUNCTION OF EACH COMPONENT

Controller



01 NAME AND FUNCTION OF EACH COMPONENT

Armrest Buttons

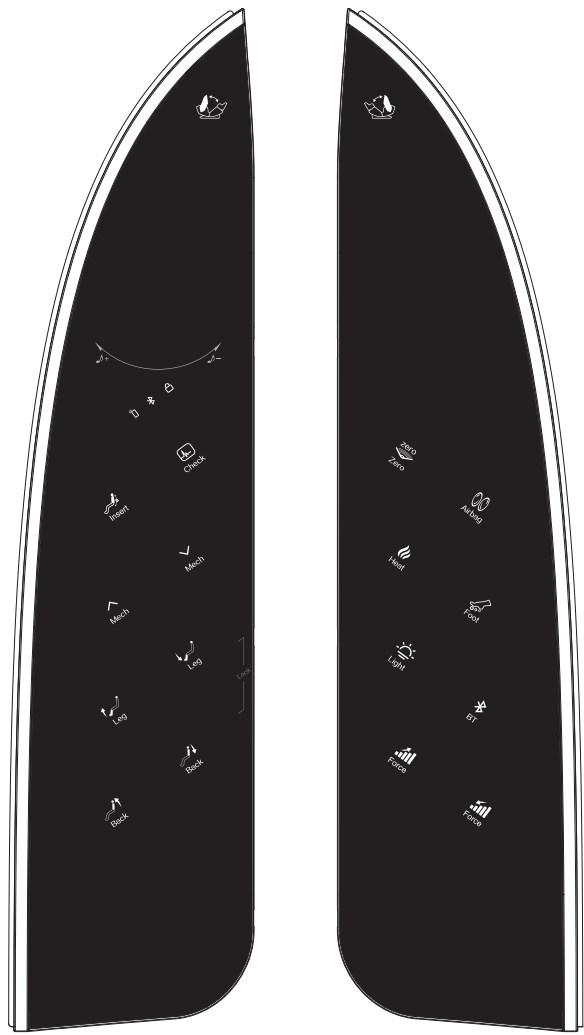

01 NAME AND FUNCTION OF EACH COMPONENT

Armrest Buttons Instructions



Left/Right Armrest



Light: Permanently on when flipped open, permanently off when flipped closed.

Armrest Stowed Position: Press and hold the upper armrest button for 2s to flip up the left/right armrest.

Armrest Raised Position: Press and hold the lower armrest button for 2s to flip down the left/right armrest.



Home button

Press and hold for 2 seconds: Power On/Off; Voice prompt: Power on/off music.

Short press: Cycle through massage programs; Voice prompt: Program name announced.



Knob

"Decreases Bluetooth volume, background music volume, and voice prompt volume.

Voice prompt: Volume level 1-5."

"Rotate Right: Increases Bluetooth volume, background music volume, and voice prompt volume.

Voice prompt: Volume level 1-5."



Data Bluetooth

Tablet Connection Status: Connected: White LED stays on steadily. Not Connected: LED is off.



Music Bluetooth

Status of Bluetooth Connection for Mobile Phone or Tablet Music: Connected – White LED remains steadily illuminated. Not Connected – LED is off.



Child Lock

Child Lock Status: Locked – White LED remains steadily illuminated. Unlocked – LED is off.

01 NAME AND FUNCTION OF EACH COMPONENT



Insert

Insert the massage technique

Button Lights: Steady white illumination.

Tap-Vibration, activate this function: Inserts a short segment replicating the last comfortable massage technique at the current position. After this segment ends, the system will automatically return to the original massage program.

Tap again to cancel the inserted massage technique and resume the automatic program.

Voice prompt: Massage technique inserted./Auto Program Restored

The function is only available in Auto programs (except PNF Stretch)



Check

Health Detection

Tap-Vibration, button Lights: Steady white illumination.

Voice prompt: Health detection



Mech

Mechanism Up/Down

Short press: brief vibration; Long press: continuous vibration

Button Lights: Steady white illumination.



Back

Mechanism Up/Down

Voice prompt: Backrest up/down



Short press: brief vibration; Long press: continuous vibration

Button Lights: Steady white illumination.

Voice prompt: Back up/down



Leg

Legrest Up/Down

Short press: brief vibration; Long press: continuous vibration

Button Lights: Steady white illumination.

Voice prompt: Leg up/down

01 NAME AND FUNCTION OF EACH COMPONENT



Zero Gravity

Zero

Short press: Cycles through Zero Gravity Level 1 / Zero Gravity Level 2 / Zero Gravity Off.

Button Lights: Steady white illumination. Lights up blue when activated.

Voice prompt: Zero gravity off / Zero gravity one / Zero gravity two



Airbag

Airbag

Short press: Adjusts level 1-5 in automatic programs; adjusts level 0-5 in manual programs.

Button light: Steady white illumination; lights blue for levels 1-5 when activated, stays white for level 0.

Voice prompt: "Air pressure intensity level X" for levels 1-5; announces "Air pressure off" for level 0.



Heating

Heat

Short press: Heating on / Heating off; defaults to level 3 when turned on.

Button light: Steady white illumination; lights blue when activated.

Voice prompt: "Start heating" / "heat off".



Foot Roller

Foot

Short press: Foot massage on / off; manually activated defaults to level 2, automatically follows program setting (non-adjustable).

Button light: Steady white illumination; lights blue when activated.

Voice prompt: "Roller on" / "Roller off".



Ambient Light

Light

Short press: Ambient light on / off.

Button light: Steady white illumination; lights blue when activated.

Voice prompt: "Ambient Light on" / "Ambient Light off".

01 NAME AND FUNCTION OF EACH COMPONENT



BT

Bluetooth (Audio)

Short press: Audio Bluetooth on / off.

Button light: Steady white illumination; lights blue when activated.

Voice prompt: "Classical Bluetooth on" / "Classical Bluetooth off".



Force +

Short press: Adjusts smart intensity level 1-5 in automatic programs; adjusts level 0-5 in manual programs.

Button light: Steady white illumination; lights blue for levels 1-5, stays white for level 0.

Voice prompt: "Auto intensity level N".



Force –

Short press: Adjusts smart intensity level 1-5 in automatic programs; adjusts level 0-5 in manual programs.


Button light: Steady white illumination; lights blue for levels 1-5, stays white for level 0.

Voice prompt: "Auto intensity level N".

01 NAME AND FUNCTION OF EACH COMPONENT

1、 One Press Control Sliding Forward

It will slide forward by 28 cm and recline afterwards.Glider recliner linkage mechanism to save space and provide utmost relaxing position.

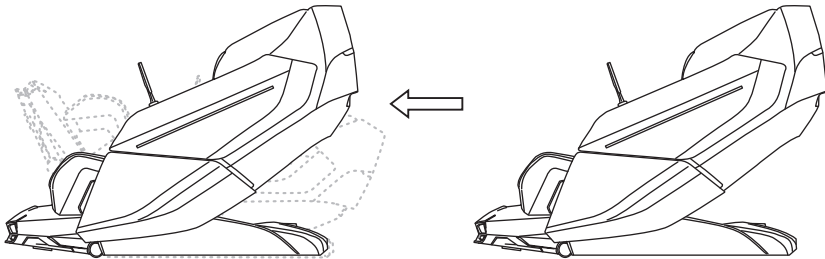

2、 Zero Gravity Position

At such a weightless position that the height of the legs slightly higher than the upper body,the weight of body can evenly distributed throughout, reducing the pressure of the spine and joints both physically and mentally.

3、 Auto/Manual Footrest Extension

The footrest can extend automatically to customize the user's leg length,you may also use the controller button to adjust the footrest according to your needs.The lower footrest can extend by 18cm automatically for various users with different stature.

4、 Air Pressure Massage

Whole body air pressure massage for shoulders,arms,back,waist,hips,legs and feet.

5、 Roller massage

Equipped with 3 rows of roller massage on the soles of the feet, it can provide comprehensive finger pressure massage on the soles and soles of the feet.

6、 Multiple massage techniques

"19 Manual Program Techniques:

Kneading (Straight, Reverse, Rubbing, Circular, Rhythmic)

Sync (Straight, Reverse, Rubbing, Circular, Rhythmic)

Knocking (Continuous, Rhythmic, Variable)

Shiatsu (Regular, Tuina, Deep)

Tapping (Short, Medium, Long)"


PRELIMINARY CHECKS

Installation Method

Step 1: Install the Left Upper Armrest


Align the two positioning pins on the aluminum part of the left upper armrest with the two holes on the left gear shaft of the main unit. Pass all cables inside the left gear shaft through the upper armrest (ensure the cables are not pinched). Tighten the four hexagon socket head cap screws onto the gear shaft.

Securely connect the terminals of the main unit's left-side cables and the left upper armrest cables by color. Insert the air tube into the connector until it is fully seated.

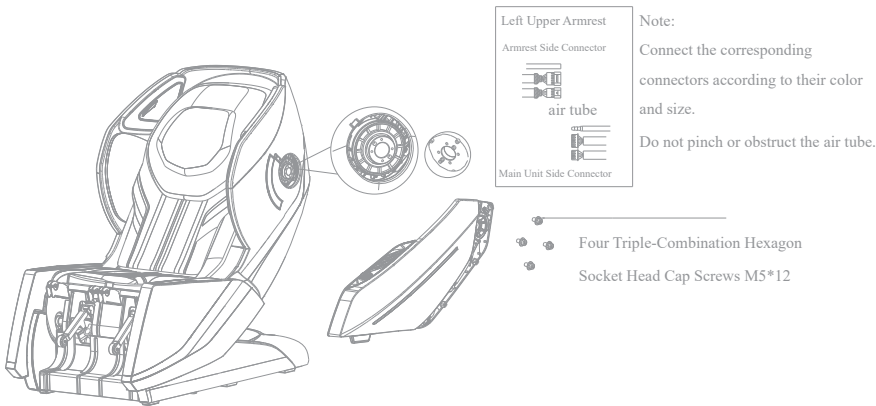

Step 2: Install the Left Upper Armrest

Press the outer decorative cover onto the left upper armrest by hand.

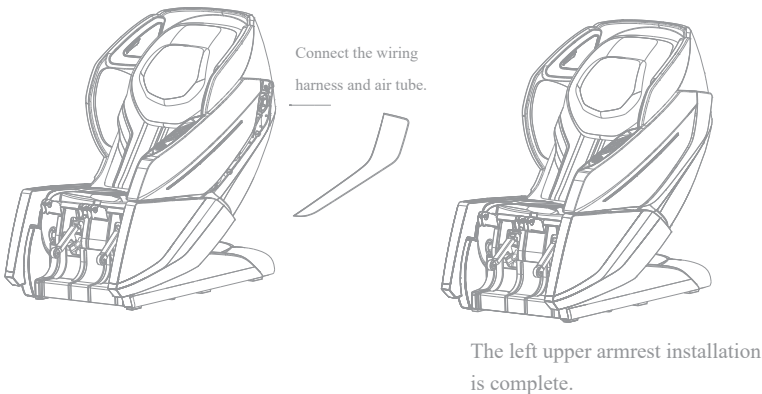


PRELIMINARY CHECKS

Installation Method


Step 3: Install the Right Upper Armrest

Align the two positioning pins on the aluminum part of the right upper armrest with the two holes on the right gear shaft of the main unit. Pass all cables inside the right gear shaft through the upper armrest (ensure the cables are not pinched). Tighten the four hexagon socket head cap screws onto the gear shaft. Securely connect the terminals of the main unit's right-side cables and the right upper armrest cables by color. Insert the air tube into the connector until it is fully seated.

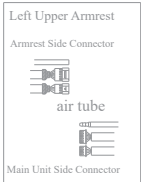


Note:
Connect the corresponding connectors according to their color and size.
Do not pinch or obstruct the air tube.

Four Triple-Combination Hexagon
Socket Head Cap Screws M5*12

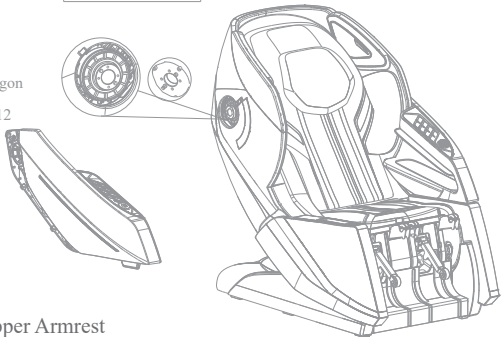

Step 4: Install the Right Upper Armrest

Press the outer decorative cover onto the right upper armrest by hand.
Connect the wiring harness and air tube.
The right upper armrest installation is complete.

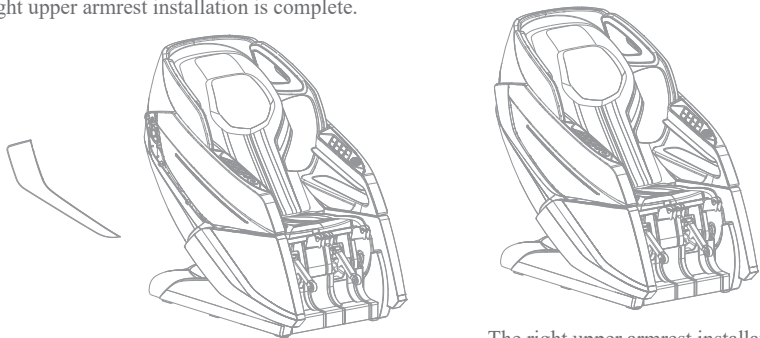


The right upper armrest installation
is complete.


PRELIMINARY CHECKS

Step5, Install the Footrest Unit

Screw hole Raise the legrest unit,thread the air hose into the air nozzle,and fit the air valve plug into the air valve port which located at the face side of seat base,make sure they are Armrest linkage unitwell secured.

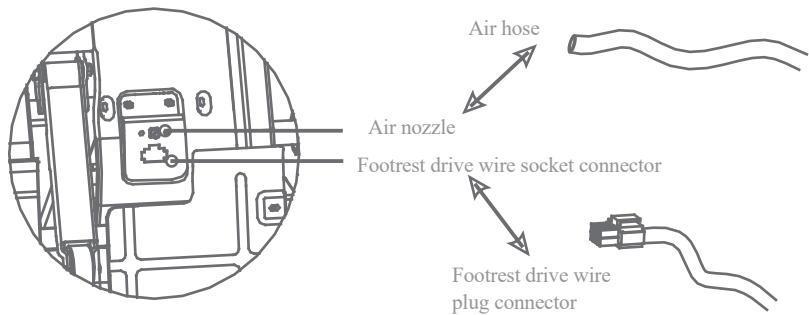

Mount the calf cover onto the leg rotation shaft. Engage the leg assembly by raising the black metal locking hook, then lower and secure it by tightening the fixing screw.

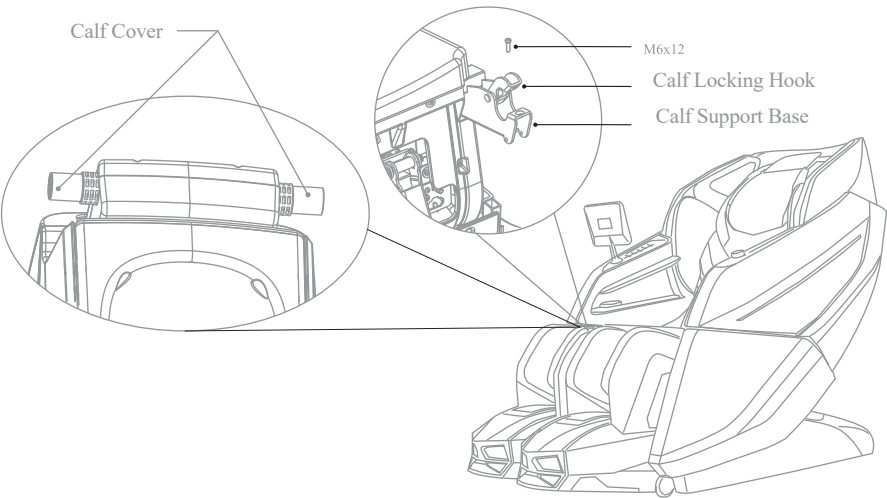


PRELIMINARY CHECKS

Install the Control Screen Bracket:

Insert the control screen bracket into the mounting hole on the right armrest (Note: The screen should face inward).

Tighten the bracket knob clockwise. When the knob reaches the bottom, use a flat wrench to fully and securely tighten the bracket knob.

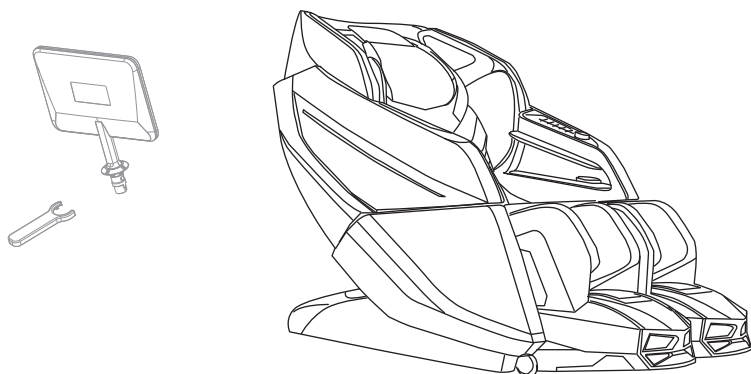


PRELIMINARY CHECKS

Step 5: Other Accessories

Connect the power cable to the product power socket located at the power box.


Connect power to chair, switch ON the power button, use the controller to raise the backrest to fully upright position.

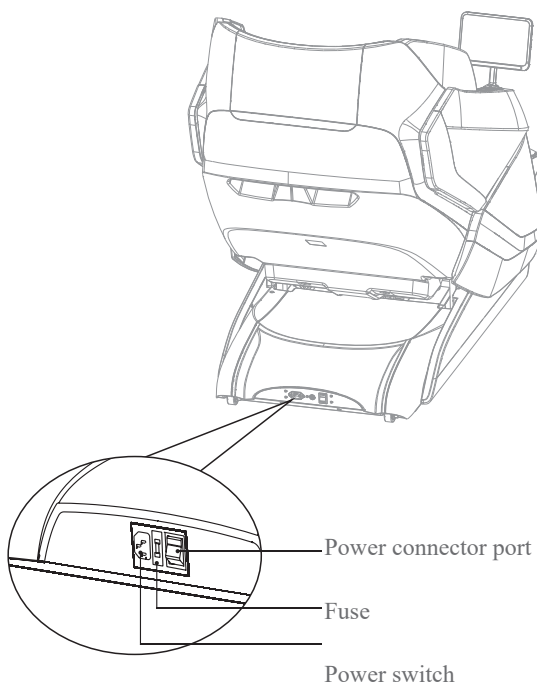

PRELIMINARY CHECKS

Moving the Massage Chair

- ▶ Roll the chair on its casters to the desired location.
- ▶ Incline the backrest to upright position.
- ▶ Turn off the power switch and unplug the appliance from the electrical outlet.
- ▶ Using two people, push down on the backrest and lift up on the front side by grabbing the moving Holder located to the front bottom of the armrest, roll the chair on its casters to the desired location (check the sketch for reference).

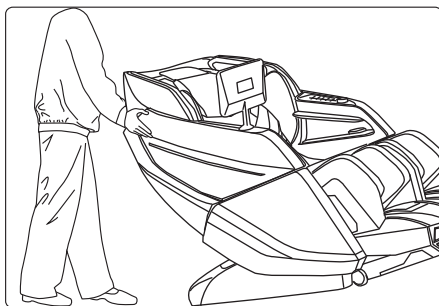


CAUTION

- ▶ Do not move the chair when there is user inside.
- ▶ To carry this product, do not lift by the footrest or armrest, hold the chassis and steady the backrest (have 4 or more people to carry the product).

Connecting to Power

- ▶ Connect this appliance to a 3-wire properly grounded outlet.
- ▶ Turn on the main power switch by the right hand side of the massage chair.

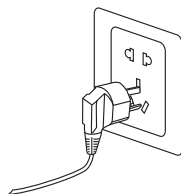

CAUTION


- ▶ Please verify that there is no damage to the supply cord before switching on the massage chair.
- ▶ Please verify that the main power switch is turned off before connecting to power.

PRELIMINARY CHECKS


Position & Placement for Installation

Clearance space for the massage chair:

- ▶ Please place the product in a location with sufficient space: The horizontal distance between the highest and lowest positions of the backrest frame is 28 cm. When the calf rest is raised to its highest position and the entire unit moves forward, the horizontal distance to its lowest position is 60 cm. Ensure there is at least 28 cm of clearance behind the product and at least 60 cm in front of the product.

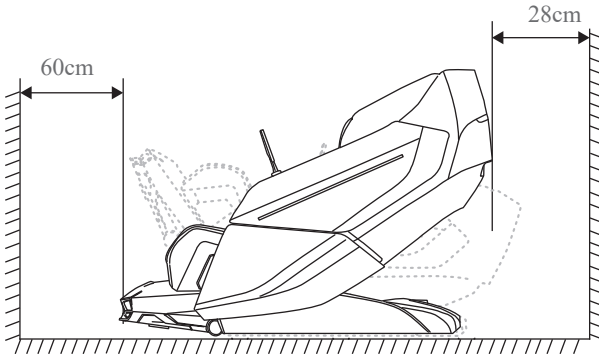

- ▶ Maintain a distance of at least 1 meter from audiovisual devices such as televisions and radios to prevent signal interference.

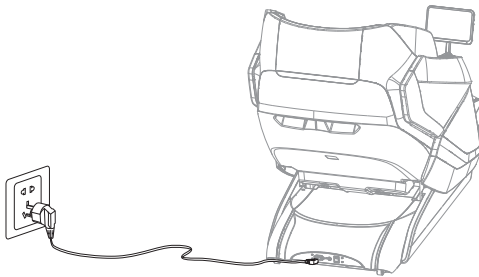


CAUTION

Keep the distance between the power socket and power switch within 1.5 meter to avoid damage of power cord while massage chair sliding forward. Straighten the power cord while in use to avoid tangle or damage. When the massage chair sliding forwards or back, please check to make sure there are no children, pets or other obstacles around to avoid accident.

PRELIMINARY CHECKS

Floor Protection

- We recommend to place a piece of carpet or soft mat underneath it to avoid damaging the floor.

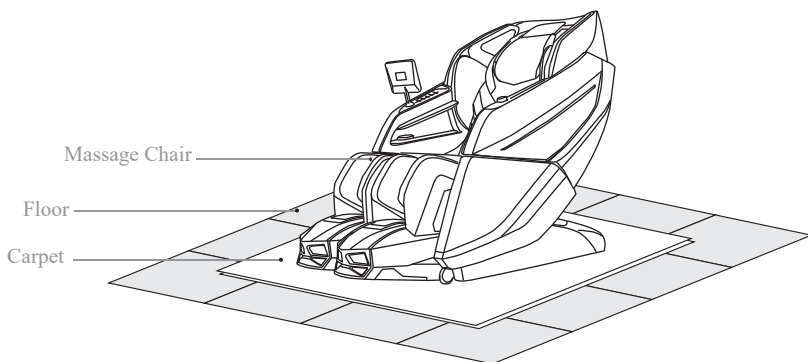

Surrounding Environment



- Do not use the massage chair in high moisture environment such as near swimming pool or bathroom to prevent electric shock accident.



- Please keep the massage chair away from heated surfaces to prevent fire hazard or damage to the product.

Grounding



- This product must be grounded, the plug must be plugged into an appropriate 3-wire grounded outlet that is properly installed and grounded in accordance with all local codes and ordinances to reduce risk of electrical shock.


PRELIMINARY CHECKS

Commissioning

- Using the controller, lower the backrest frame to its lowest position, and raise the calf rest to its highest position while extending it to its maximum length. Ensure there is
- sufficient space around the massage chair before proceeding.

- Using the controller, raise both armrests to their highest positions after the backrest is
- reclined. Ensure ample space is maintained around the massage chair.

After verifying all functions operate correctly, fully reset the massage chair and turn off the power switch.

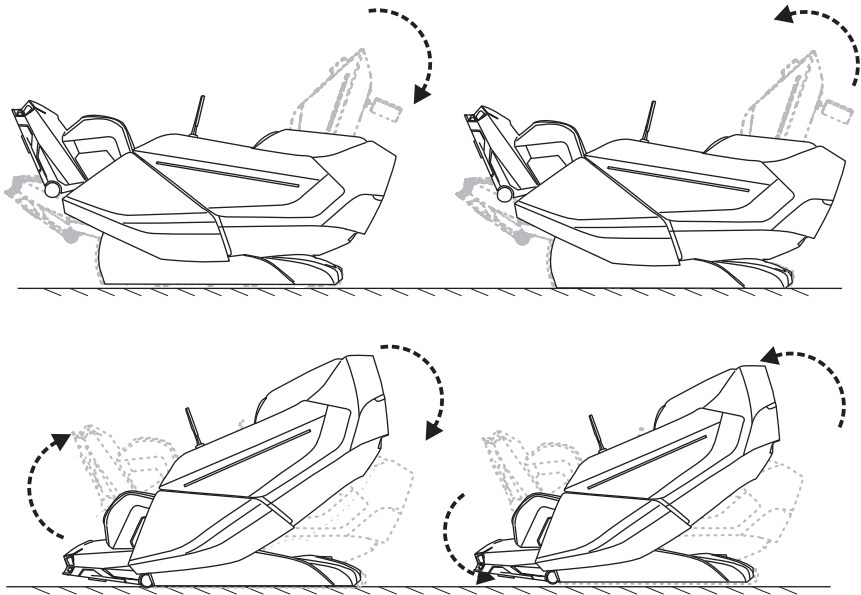

Before Sitting in the Chair

- Ensure the footrest is well assembled before sitting on the massage chair.
 - Ensure the massage chair is returned to its original position before sitting on it.
- If there is any part not in default position, please turn off the massage chair to allow it to restore.



CAUTION

- ▶ It is strictly prohibited to place weight on the armrests or sit on them while the chair is in operation.
- ▶ When the armrests are raised at an angle, shaking them sideways or hanging objects on them is prohibited.
- ▶ When the armrests are flipping upward or downward, do not place any obstacles between the upper and lower armrest sections.
- ▶ While the armrests are flipping, do not lean against, impact, or pull them sideways.



CAUTION

- ▶ Do not sit down while the calf massage frame is raised.
- ▶ Avoid subjecting the calf massage frame to sudden or excessive pressure, as this may damage the mechanical structure.



CAUTION

- ▶ Do not play on the massage chair or operate it improperly.
 - ▶ Ensure there is no obstruction when raising or reclining the backrest and footrest.
 - ▶ Do not put foot, fingers or any other objects in the openings of the chair when it is in the reclining, raising or restoring motion.
- Ensure that massage chair is restored back to its original position before getting off the massage chair.

After Use

- ▶ After using the massage chair, ensure that the flip armrests, calf rests, and backrest are fully returned to their original positions. Avoid leaving the armrests or calf rests suspended for extended periods.
- ▶ Turn off the power switch and unplug the power cord from the electrical outlet.
To prevent accidents caused by children accidentally activating the massage chair,
- ▶ always turn off the power switch and unplug the power cord when the massage chair is not in use.

03 CARE AND MAINTENANCE

Care Instructions

- ▶ To treat stains on back panel, armrest, footrest, plastic parts or air hose, spot clean with mild detergent foam, then wipe it with a dry cleaning cloth.
- ▶ To treat stains on controller, power box, spot clean with a dry cleaning cloth.
- ▶ To treat stains on back cushion or pillows, use a water-based upholstery cleaner only, wipe it with moist cloth, then air dry.
- ▶ To clean the foot/calf unit covers, remove it from the chair, hand wash with a mild detergent, then line dry.



WARNING

- ▶ Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ▶ Pull out the power cord from the power strips before care and maintenance.
- ▶ To avoid electrical shock or injury, do not touch the power cord with wet hands.
- ▶ Make sure no detergent enters into the power box while cleaning.
- ▶ Do not use benzene, thinner or other solvents on your product, it may cause fading or damage to the product.
- ▶ Do not iron the upholstery.

Storage Methods

- ▶ Cover the product with a dust-free cloth to prevent collection of dust if not in use for a long period of time.



CAUTION

- ▶ Do not leave this product exposed to direct sunlight for long periods of time. This may cause fading or damage.

Warm Tips

During daily use, please check for the following symptoms:

- ▶ Burnt smell.
- ▶ Power flickers on and off when touching the charging cable.
- ▶ The power cord is hot.
- ▶ Other abnormal symptoms.



CAUTION

- ▶ Please stop using the product to avoid breakdowns or accidents if any above symptom exists.
- ▶ Switch off the power button and disconnect the plug, contact the local distributors or supplier for repair.
- ▶ All other servicing except above care and maintenance should be serviced by an authorized dealer or service center.



WARNING

Pull out the power cord from the power strips before care and maintenance.
To avoid electrical shock or injury, do not touch the power cord with wet hands.
Do not try to dismantle or repair the product yourself, please send your massage chair to the authorized service center.

04 TROUBLESHOOTING

No.	Symptoms	Possible Causes	Possible Solutions
1	Noise is heard while in use	This sound is normal and comes from the air pump motor or other mechanical parts rubbing against the cloth cover	No need to take any measures
2	Appliance does not start	The power cord is not secured into the socket	Insert the power plug properly into the power socket
		Power switch is off	Turn on the switch
		The fuse is blown	Replace only with a fuse of same type and rating
3	No music comes from the speaker	The volume is turned to the lowest	Adjust the speaker volume from the mobile devices
		Bluetooth is off	Switch on Bluetooth
		Bluetooth connected with other device	Reconnect Bluetooth
4	Backrest or footrest can not raise or recline	Excessive load has been pressed on the backrest or legrest	Reduce the load and try again

If problem remains, please contact the dealer for maintenance.

Important: Do not attempt to repair this product yourself, our company shall not be liable for the injury or damage caused by any servicing without authorization.

05 TECHNICAL SPECIFICATIONS

Name: Deluxe Multi-function Massage Chair

Model: RT9000

Rated voltage: 220V~

Rated frequency: 50Hz

Rated power: 265W

Safety design: Class I


RT9000.22.6.1.3-902001-A1

143mm

210mm

Deluxe Multi-function Massage Chair

RT9000 USER MANUAL

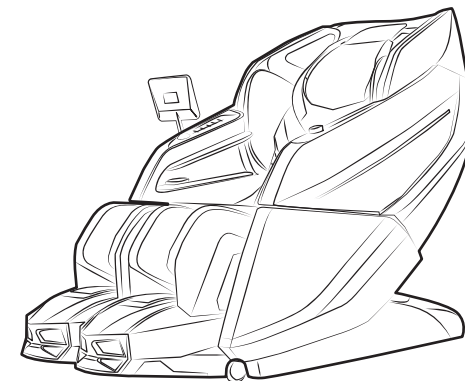

借通用登记表

描图

校描

旧底图总号

签字

日期

技术要求:

1.材质：157g 铜板纸；

2.尺寸：210*143mm/32K28P;

3.色号：黑白；

4.工艺：骑马钉；

5.公差： $\pm 1\text{mm}$;

6.外观要求：套印准确、清晰；冲裁居中、无毛边；

7.成品尺寸、模切尺寸符合要求，偏差在允许范围内，

标贴尺寸的未注公差按GB/T1804-2000中等级别c执行；

										上海荣泰健康科技股份有限公司				
标记	处数	更改文件号	签字	日期										
设计			标准化		图样标记		数量	文件：实物		RT9000.22.6.1.3-902001-A1				
校对			审定					/						
工艺			批准											
审核			日期		共 1 页		第 1 页							
											英文说明书			